MOXI® MATE

Quick Start Guide

Thanks for buying a Moxi Mate®. Whether you've purchased your Mate to watch shows recorded on your Moxi HD DVR in the bedroom or to stream media from your computer, we know you want to see it in action. Let's get started.

What you need for setup:

- Moxi Mate
- Computer connected to the Internet
- Wired Ethernet connection to the Moxi Mate
- Optional – Moxi HD DVR

For additional information on using your Moxi Mate, other Moxi products, and for additional support, see our website: http://www.moxi.com.

1 Unpack Your Moxi Mate

Package Contents

Moxi Mate

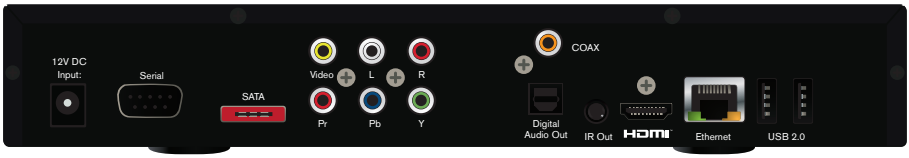

Moxi Remote

Important Advisory Information*

HDMI Cable

Component Video Cable

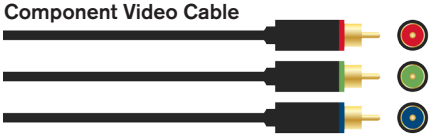

Composite A/V Cable

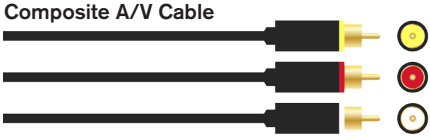

Power cord

Ethernet Cable

Batteries Separate

***Review the Important Advisory Document and these instructions in full.**

2 Connect to the Moxi Service

Connect your Moxi Mate to your home network with the Ethernet cable.

A broadband Internet connection is required to access recorded TV shows from a Moxi HD DVR, receive service updates, and access additional Moxi features.

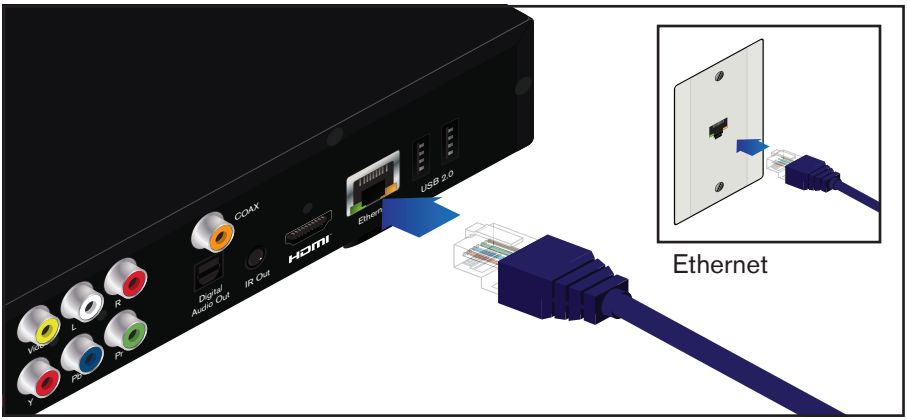

If you do not have an Ethernet port nearby, you can:

- User a Powerline adapter, which will use your electrical wiring as a transmission medium for broadband Internet access.
- Use a MoCA adapter, which uses your existing coaxial wiring as a transmission medium for broadband Internet access.

For more information, see the Moxi Mate User Guide at moxi.com.

3 Connect to Your TV

Connect your Moxi Mate to your TV with the HDMI cable.

HDMI provides the best video and audio quality in one cable. If your TV doesn't have an HDMI input, use the component or composite cable. HDMI or component connections are required for HD video support.

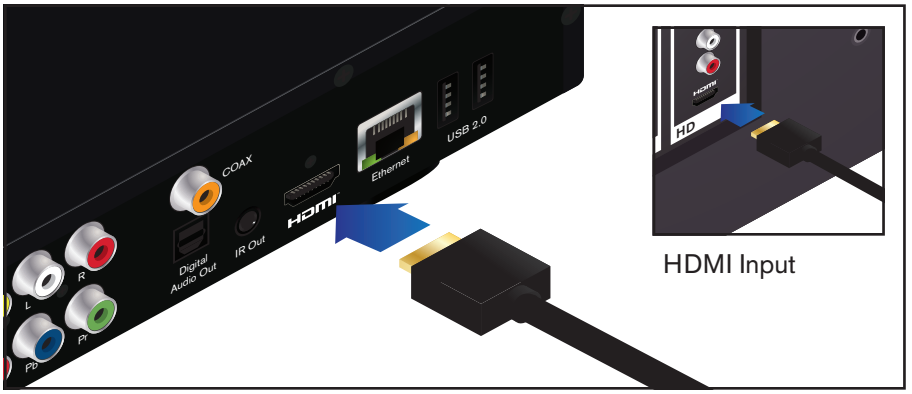

Tip: You can connect additional devices such as stereo receivers to your Moxi HD DVR. See the user guide at moxi.com for further information.

4 Plug in the Power Cord

The Moxi logo on the front panel will light up as soon as you connect power to your Moxi Mate.

You may want to use a surge protector. Do not use a standard extension cord.

5 Activate Your Moxi Mate

Note: During this part of the setup process, you will need to have access to a computer with an Internet connection.

Start the Guided Setup on Your TV

Turn on your TV to start the registration of your Moxi Mate.

If a software update is available, the Moxi Mate will already be downloading that update and restart. This may take up to 45 minutes depending on your Internet connection speed; do not unplug your Moxi Mate during this time. When complete or if an update is not required, you will see the following registration screen containing your Moxi ID.

MOXI
Moxi Setup
Get an account at moxi.com
Before continuing, please go to www.moxi.com and create a Moxi account.
When prompted enter this Moxi ID.
123456789123
Setup Tip
Did you know you could schedule recordings at moxi.com?

Write down this ID, go to your computer, and direct an Internet browser to moxi.com. If you have already set up a Moxi HD DVR, sign in to your account, and select “Add a Device”. If you have purchased the Moxi Mate as a stand-alone device, select “Activate a Moxi”. When prompted for your Moxi ID number, type in the 12-digit Moxi ID that was displayed on your TV screen.

Once you have completed the registration process or the addition of this device, you’ll see an 8-digit registration key on your computer screen. This registration key will also be sent to the email address you provided during registration.

6 Complete Your Registration

Go back to your Moxi Mate, and use your remote to enter the 8-digit registration key when prompted.

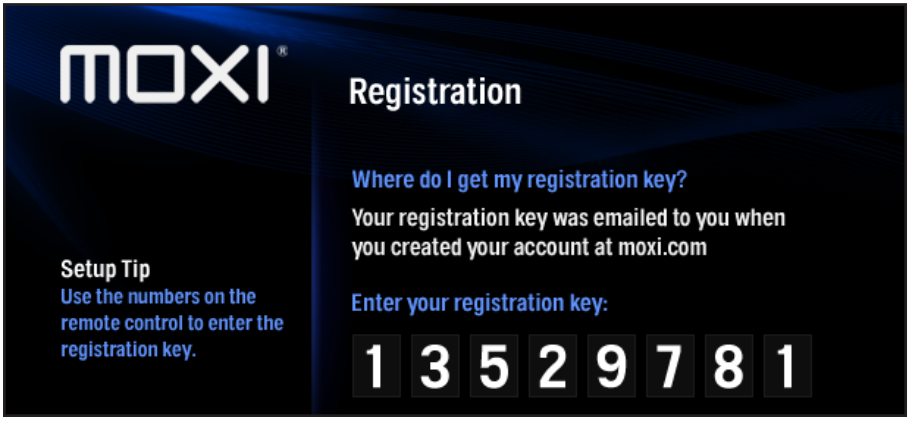
moxi
Registration
Where do I get my registration key?
Your registration key was emailed to you when you created your account at moxi.com
Enter your registration key:
1 3 5 2 9 7 8 1
Setup Tip
Use the numbers on the remote control to enter the registration key.

Next, confirm your account information. Your Moxi Mate will complete any downloads. When the download is complete, you'll be asked to restart your Moxi Mate.

7 Set Your TV resolution

If you have connected your TV to your Moxi Mate with an HDMI cable, you can skip this step.

We want to make sure that the Moxi Menu displays correctly on your TV screen and is optimized for high-definition viewing.

Settings
TV Setup
Set Resolutions
Set HDTV settings
Select the native resolution your TV supports (check your TV user manual). Moxi will confirm that you selectin works. To provide you with the best possible viewing experience, 1080i must be selected before selecting 1080 24hz or 1080p 30hz.
When you see a TV picture and confirmation note, select OK. If you see a blank or scrambled image, wait 30 seconds for the picture to return. This means your TV does not support this resolution.
1 of 2
next
7
close
720p
480p
480i
1080p 30hz
1080p 24hz
1080i

1. Press the Moxi button and navigate horizontally to Settings
2. Scroll vertically to TV Setup
3. Choose the highest resolution you think your TV supports. Check your TV manual for details.
4. After making your resolution selection, wait to make sure you see the Moxi Menu. If you do not see anything appear on your screen, wait 30 seconds and the Moxi Mate will revert to the previous settings for you to try again.
5. For best performance, unselect any other resolutions other than the highest one your TV supports.

8 Viewing your Moxi HD DVR Shows on Moxi Mate

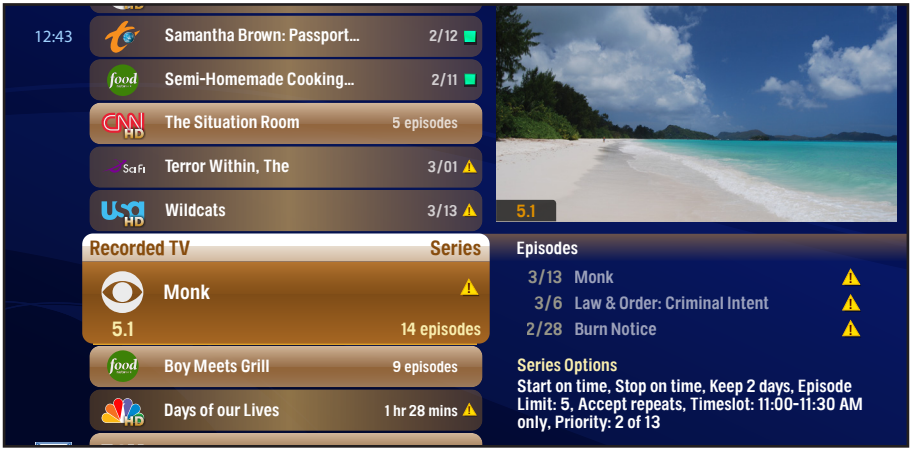

If you have your Moxi HD DVR set up to share its media across your home network, the Moxi Mate will automatically detect the presence of your Moxi HD DVR and the recorded TV shows that are available for viewing.

The Moxi Menu on your Moxi Mate will now contain an extra menu item called Recorded TV that contains your recorded shows.

9 Enjoy Your Moxi Mate

Congratulations! Have fun using your Moxi Mate.

To start navigating:

- Use the left and right arrow buttons to browse the main menu
- Use the up and down arrow buttons to scroll through items in each category
- When you see something you like, press OK to get a list of options.

Make sure to visit moxi.com, where you'll find the Moxi Mate and Moxi HD DVR User Guides, which will introduce you to great features, give you instructions on how to set them up, and provide details on alternate setup configurations.

Visit moxi.com to download the complete Moxi User Guide and discover all of the capabilities your new Moxi Mate has to offer.

www.moxi.com

© 2009 Arris, Inc. All rights reserved. Arris, Moxi and the Moxi logo are trademarks and registered trademarks of Arris, Inc. HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC. Use of the trademarks and service marks of the National Television Academy ("NATAS/NTA"), requires the prior express written permission of the National Television Academy. CableCARD™ is the trademark of Cable Television Laboratories, Inc. www.moxi.com

Part # 030-0020-104 Rev. 4.0